SP-MBS-2-6KVA-2 INSTALLATION AND USER GUIDE




UNIT COMES PACKAGED IN A 24L x 24W x 18H CARTON, 140 LBS



UNIT REMOVED FROM CARTON

OPEN DOOR AND
REMOVE WOOD
BLOCK. PROVIDED TO
KEEP TRANSFORMER
FROM MOVING
DURING SHIPPING

INSTALLER TO MOUNT TO WALL AND TO ROUTE INCOMING POWER TO ENCLOSURE. BE SURE THAT THE TWO AIR VENTS ON THE LEFT AND RIGHT SIDE ARE NOT BLOCKED.

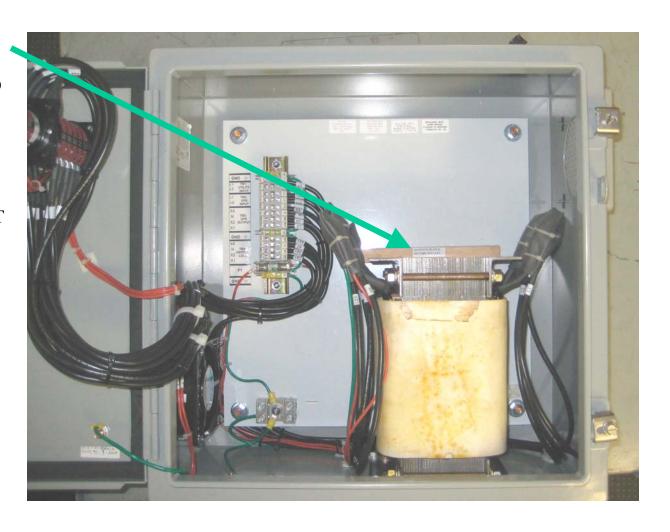

Installation Instructions for bypass panel

This is a bypass panel manufactured for Powervar. It is intended for use as a bypass switch for the UPS protecting critical loads.

The power circuitry is enclosed in a metal enclosure with a hinged door. Visible from the front of the unit is the bypass switch operating handle.

Access is through the front door by use of a screwdriver to loosen the two cover screws located along the right side of the unit. Disconnect all sources of supply (Utility power and UPS power) prior to working on electrical equipment including the bypass and any downstream distribution or loads. It is recommended that a licensed electrician install and troubleshoot the equipment.

This unit is HEAVY, take necessary safety precautions to prevent injury. Locate the panel in a convenient location within sight of the UPS. Be sure to install in a manner to support 140 pounds. The unit should be installed within sight of the UPS. Be sure to keep the two vents clear of any obstructions, failure to do so will result in damage to the unit.

Conduit entry can be at the top in the area toward the right right side of the enclosure away from the switch. Right side entry can be near the top away from the transformer. Bottom entry can be at the left third of the bottom section away from the transformer. Cover any internal components when punching or drilling through enclosure walls.

Incoming and outgoing wires to be terminated at the terminal block located at the upper left hand side of the unit. Input from utility power (208VAC, 1PH, 60Hz, L+L+G), input from the UPS output (240/208/120, 1PH, 60Hz, L+L+L+N+G), output to UPS input (208VAC, 1PH, 60Hz, L+L+G), and output to the load (240/208/120, 1PH, 60Hz, L+L+L+N+G) will be hardwired observing local NEC codes. Wiring to be rated for 35 amps. Utility input protection by others. Refer to UPS operating and installation instructions for actual connections needed for the application.

Check for tightness of all the connections inside the panel. Some wires might have worked themselves loose during shipping and handling. Insure that all connections are tight before applying power to the panel.

Observe proper cable sizing per NEC or local codes. Observe proper phase sequence when hooking up the panel.

Installation Instructions for bypass

All hardwired inputs and outputs are to be made to the terminal block in the upper left hand quadrant of the backpanel. There are individual terminals for all connections. Follow NEC or local code requirements for wire sizing.

UPS operation:

The bypass switch should be in the "Normal" position. Conditioned power is output from the UPS to the critical load.

TEST operation:

In the event that the UPS needs to be serviced or replaced, rotating the bypass switch to "Test" will reroute the utility power around the UPS through the bypass contacts on the switch to power the load. It is recommended to place the UPS in internal bypass prior to switch operation. Check the UPS installation manual to determine how to perform this operation. This mode also provides power to the input of the UPS for test purposes.

BYPASS operation:


In the event that the UPS needs to be isolated for service or to be replaced, rotating the bypass switch to "Bypass" will reroute the utility power around the UPS through the bypass contacts on the switch to power the load. The UPS will be fully isolated from this panel in this mode. A qualified technician should use proper safety guidelines when working on the UPS. Always confirm that power has actually been removed prior to working on any equipment.


General Specifications:

Utility Input: 208VAC, 1PH, 60Hz, hardwired UPS Input: 208VAC, 1PH, 60Hz, hardwired

UPS Output: 240/208/120VAC, 1PH, 60Hz, hardwired Output to Load: 240/208/120VAC, 1PH, 60Hz, hardwired

Ampacity rating: 35 amps

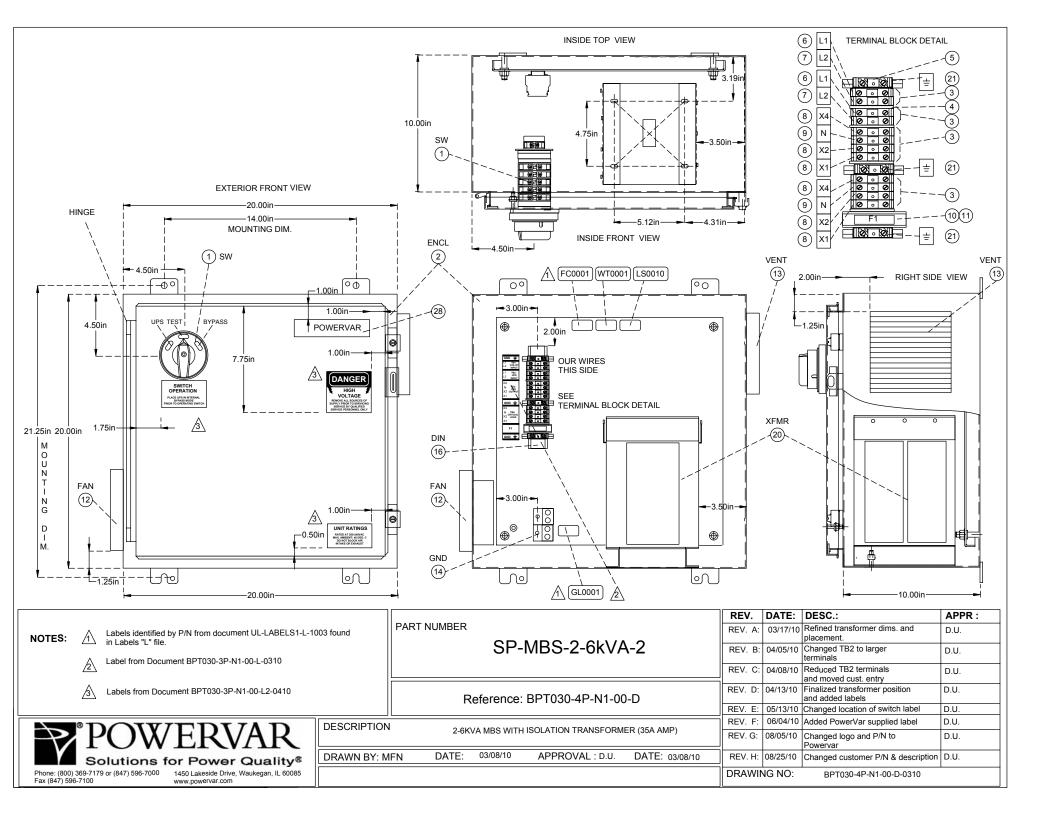

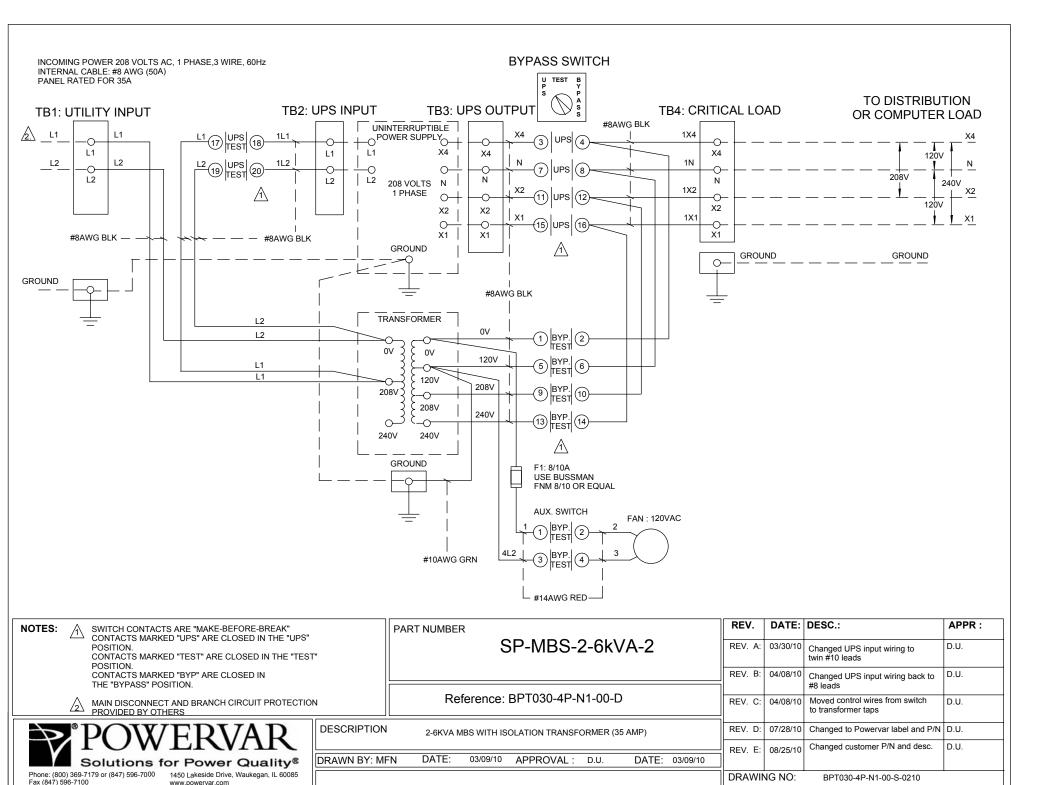

RATING INFORMATION:

VOLTAGE: 240/208/120VAC, 60 HZ

PHASE: SINGLE PHASE

FULL LOAD CURRENT: 35 AMPS

INTERRUPT RATING: 5KAIC SYM @ 600VAC

TYPE 1 ENCLOSURE

CONTACT INFORMATION:

Powervar 1450 Lakeside Dr. Waukegan, II. 60085 (800) 369-7179 or (847) 596-7000 Fax (847) 596-7100